



1/4"-20 x 1/2" LONG
THUMB SCREW
1 REQUIRED PER
THIS STEP

3/8" -16 x 1-1/2" LONG
SOCKET COUNTER SUNK SCREW
1 REQUIRED

1/4"-20 x 1/2" LONG
THUMB SCREW
1 REQUIRED PER
THIS STEP

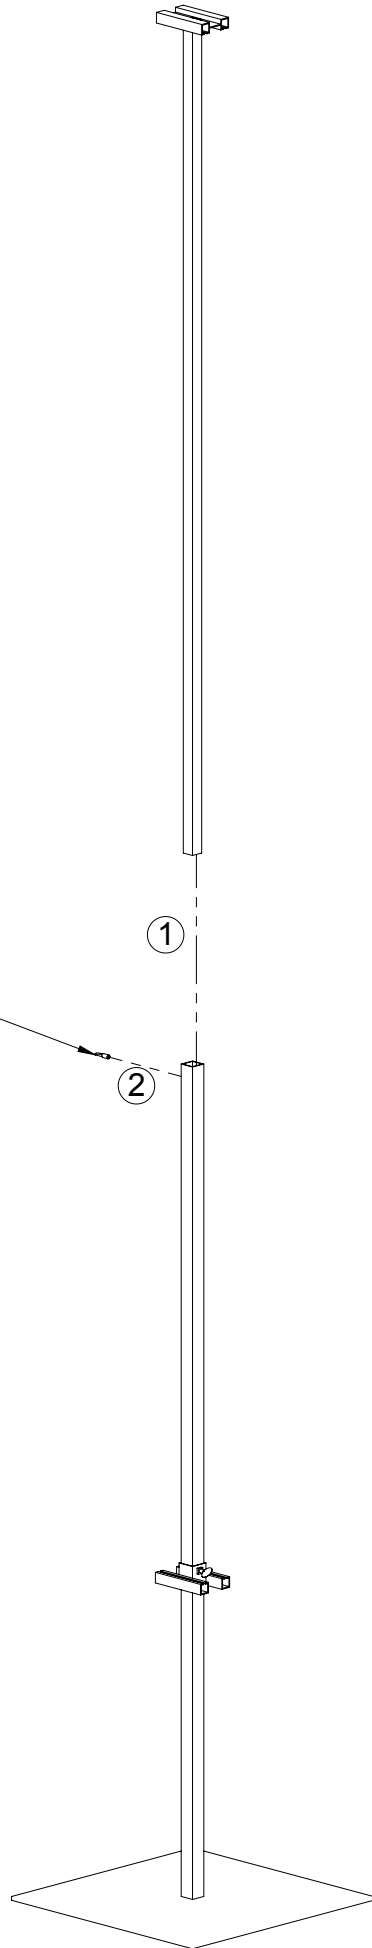

Assembly Instructions for
DBD96-B & DBD96-W

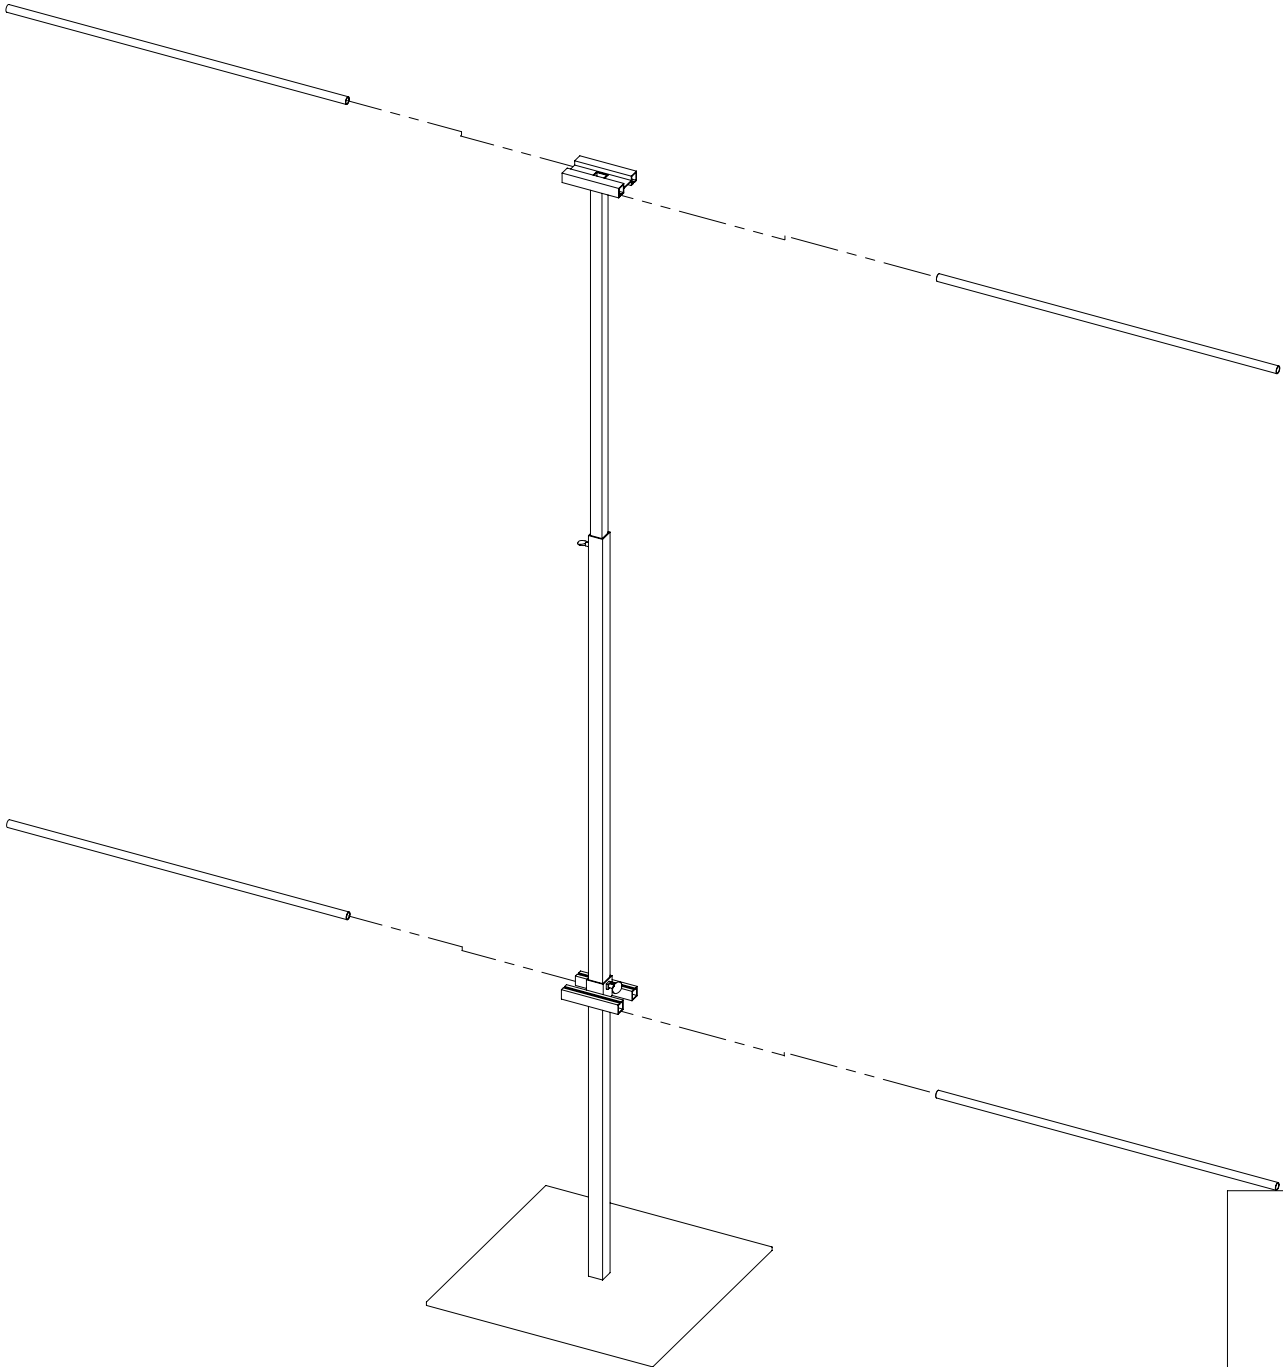

**Assembly Instructions for
DBD96-B & DBD96-W**

5



4

3

2

1