



ASSEMBLY INSTRUCTIONS: K48

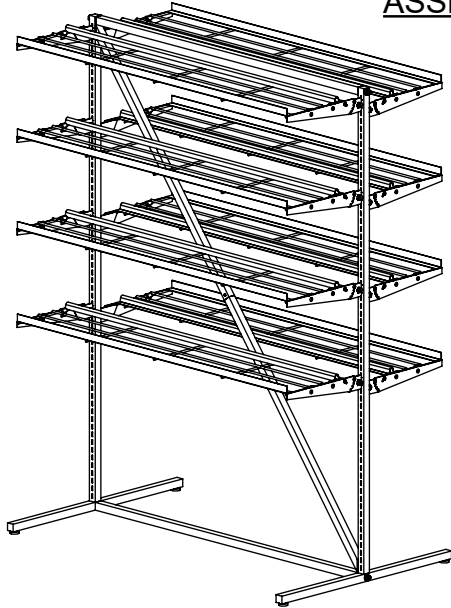

INCLUDED HADWARE




3/8-16 X 2" LONG
HEX BOLT
QTY. 4



3/8" LOCK
WASHER
QTY. 4



3/8" FLAT
WASHER
QTY. 4




ALLEN KEY

1

SNAP BUTTON

- ASSEMBLE CENTER BRACE BY
DEPRESSING SNAP BUTTON AND
JOINING THE TWO HALVES.

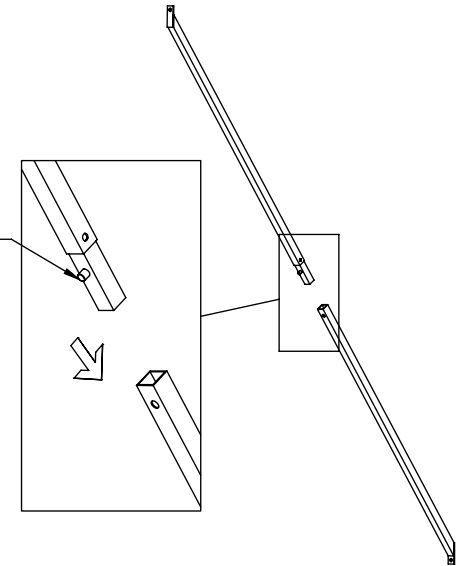

2

HEX
BOLT

FLAT
WASHER


LOCK
WASHER

- IF THEY ARE NOT ALREADY
INSTALLED, THREAD LEVELERS
INTO THE SIDE FRAME.
- SECURE CROSS BAR TO THE
SIDE FRAME WITH A HEX BOLT,
LOCK WASHER, AND FLAT
WASHER AS SHOWN.
- TIGHTEN WITH THE INCLUDED
ALLEN KEY.


SIDE
FRAME

CROSS
BAR


LEVELER

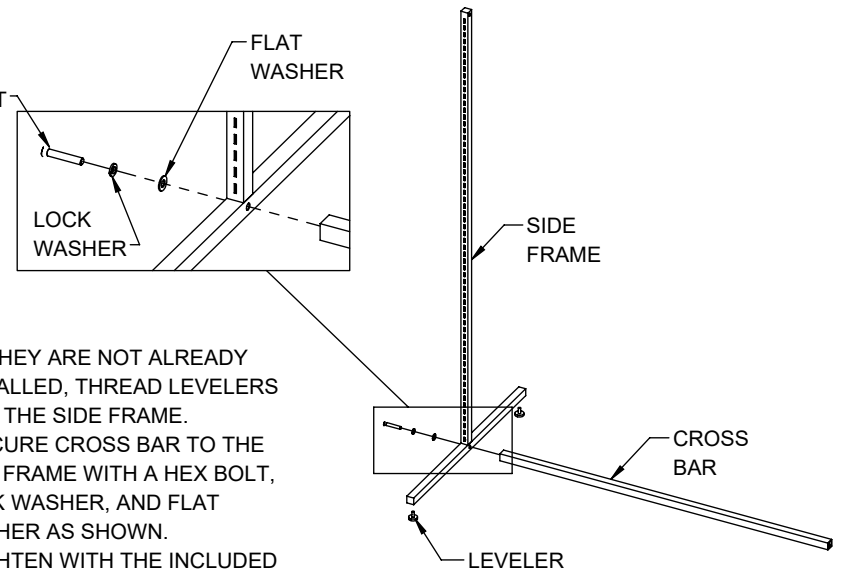


3

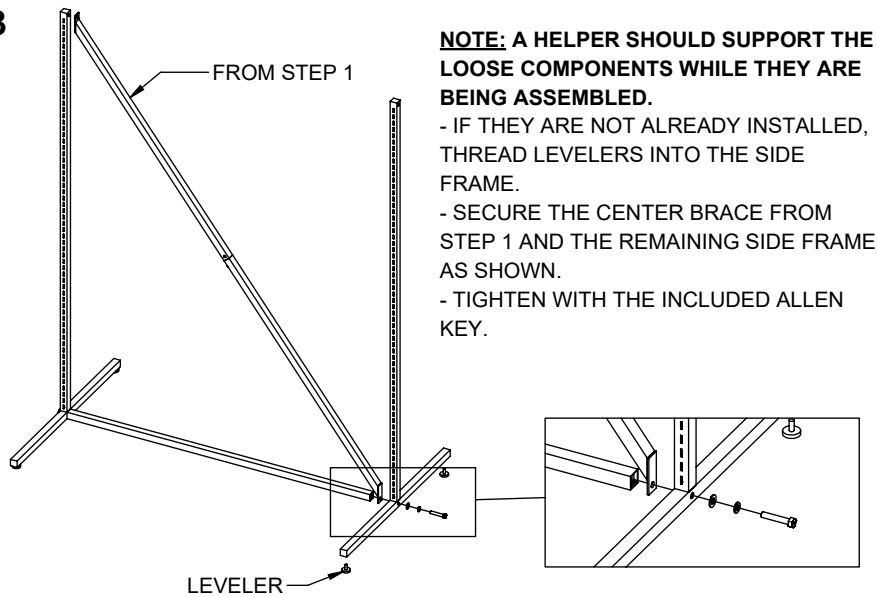



4

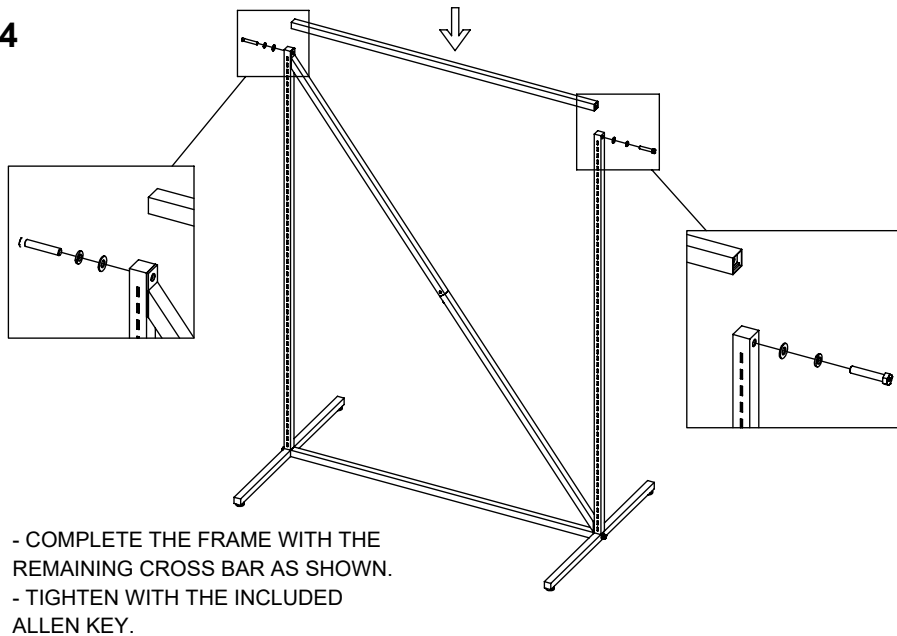


5

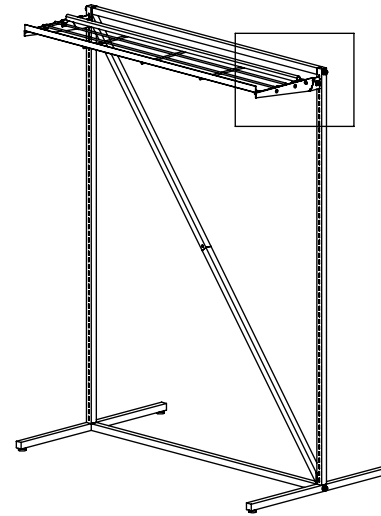

- INSTALL SHELVES INTO UPRIGHT STANDARDS AT THE DESIRED HEIGHT AND ADJUST TO THE DESIRED ANGLE.

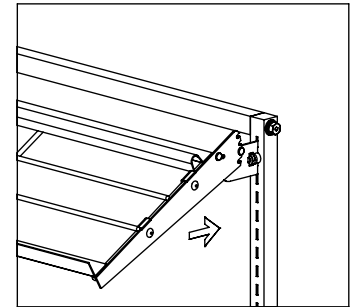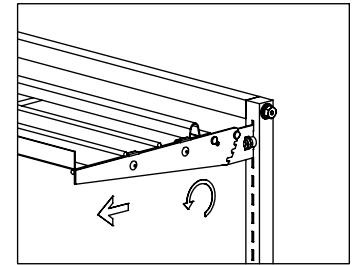

6

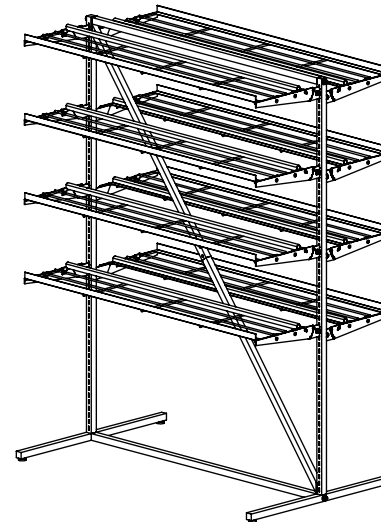

- REPEAT STEP 5 FOR THE REMAINING SHELVES.