

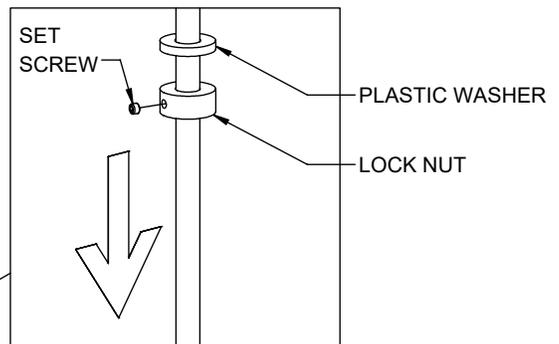
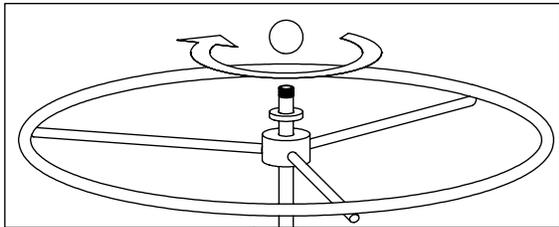


# ITEM# 3010 ASSEMBLY INSTRUCTIONS



- 4 SLIDE THE DISPLAY RING AND WASHER OVER THE SMALL UPRIGHT AS SHOWN AND THREAD THE DECORATIVE BALL ONTO THE TOP OF THE SMALL UPRIGHT.

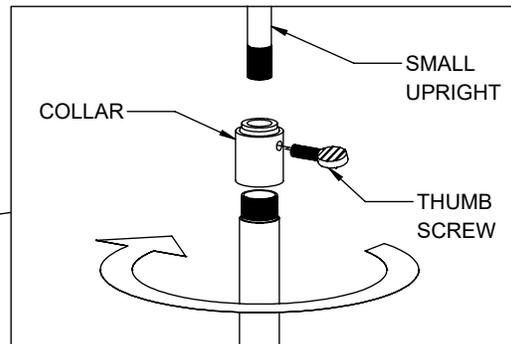

- 3 SLIDE THE LOCK NUT AND PLASTIC WASHER DOWN THE SMALL UPRIGHT TO THE DESIRED HEIGHT AND SECURE WITH THE SET SCREW.

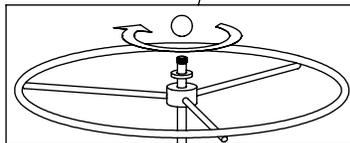

- 2 THREAD COLLAR ONTO THE TOP OF THE LARGE UPRIGHT. THE SMALL UPRIGHT CAN BE INSERTED INTO THE COLLAR AND SECURED WITH THE THUMB SCREW.

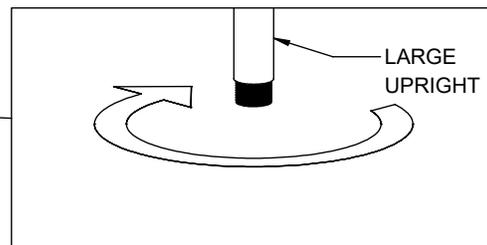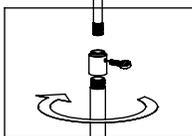

- 1 THREAD THE LARGE UPRIGHT INTO THE BASE THE 3010 WILL BE INSTALLED ONTO.