
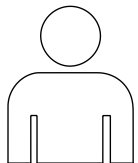



# 4-WAY SLATWALL MERCHANDISER

Items # WDSWP36(-MP, -WH, -BK) WDCAS2P36

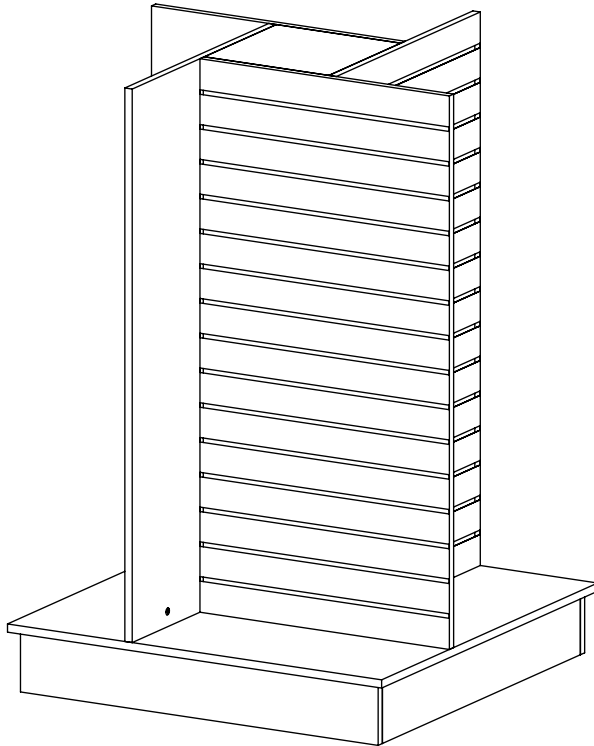

**2-3 PEOPLE  
REQUIRED  
FOR  
ASSEMBLY**


## INCLUDED HARDWARE



**40X**  
CAM LOCK AND STEM



**4X**  
STICKER




**4X**  
WOOD DOWEL

## TOOLS REQUIRED



SCREWDRIVER

**1**

- INSERT STEM ON FRONT BASES.
- ASSEMBLE WITH SIDE BASES.




**8X**  
CAM LOCK AND STEM

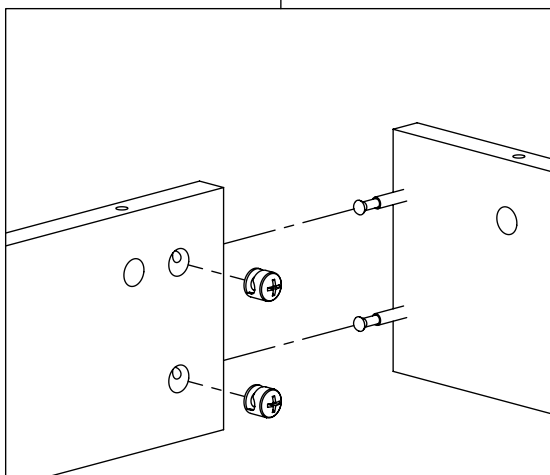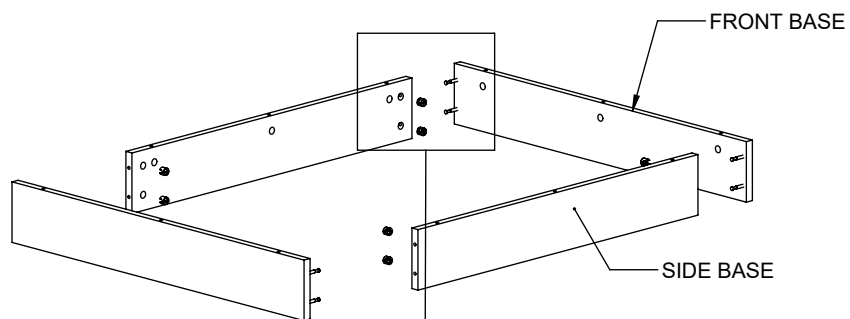


**2**

- INSERT STEMS ON BOTTOM OF SHELF-BOTTOM.
- ASSEMBLE AS SHOWN.





**12X**  
CAM LOCK AND STEM

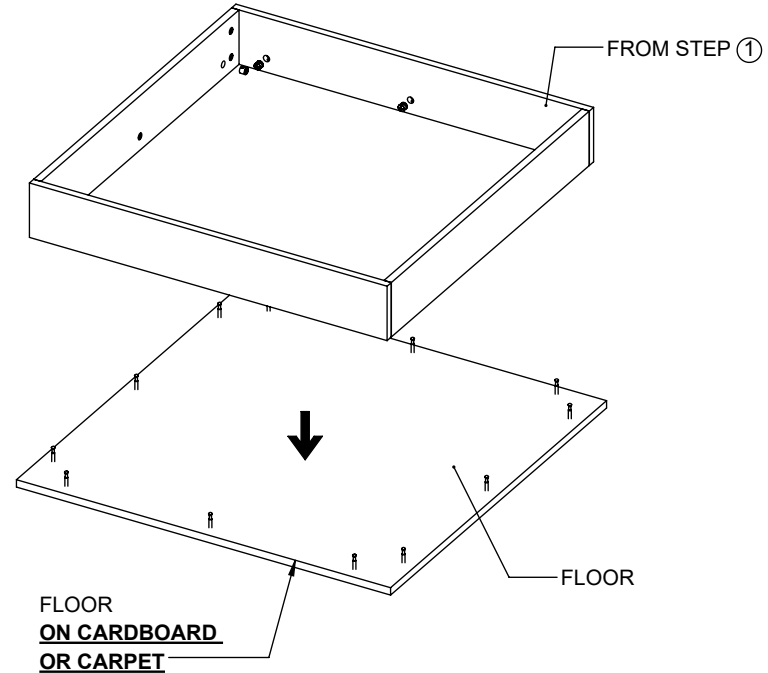


CASTER KIT  
INSTRUCTIONS

ITEM #WDCAS2H24

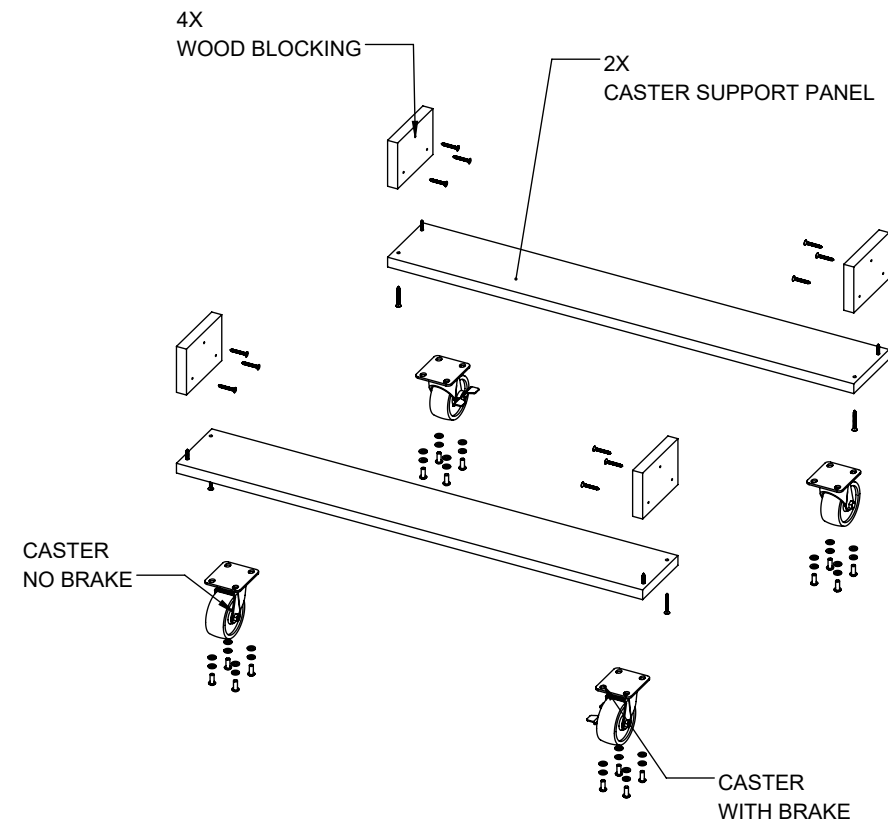


**12X**  
#8 X 1.18" LONG  
FLAT HEAD WOOD SCREW




**8X**  
#8 X 1.42" LONG  
FLAT HEAD WOOD SCREW

**1**  
PUT WOOD BLOCKING ON  
4 CORNERS, AND SCREW  
IN WITH WOOD SCREWS.

NOTE THE LONG AND  
SHORT SIDES OF THE  
BASE.




**12X**  
#8 X 1.18" LONG  
FLAT HEAD WOOD SCREW

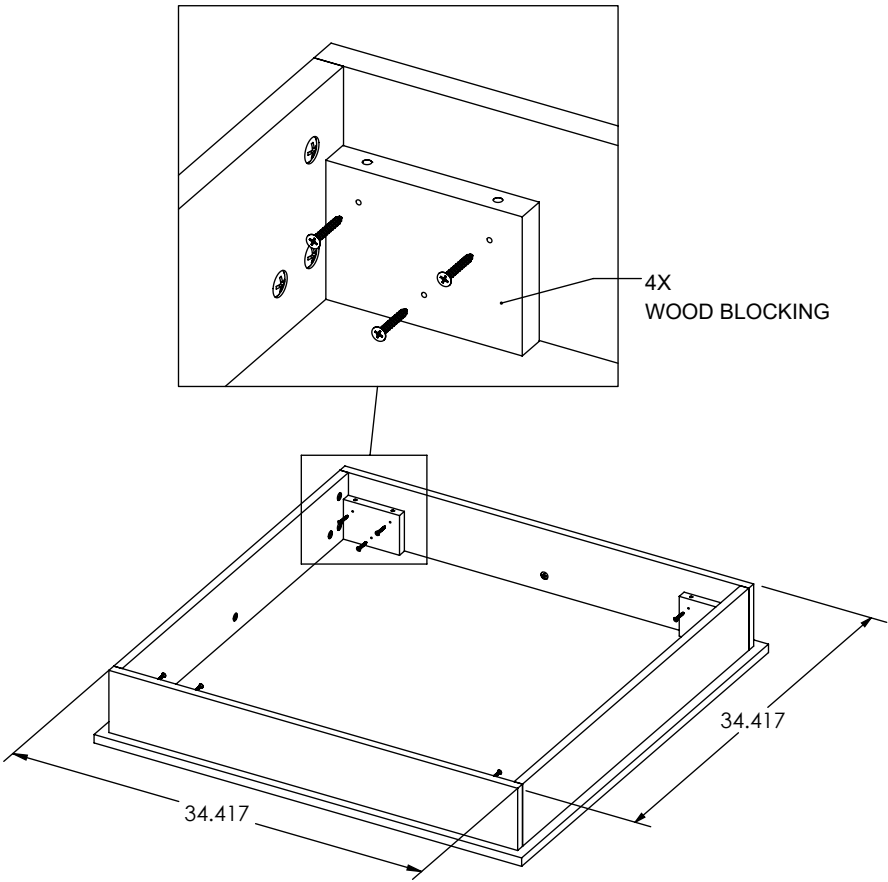


**2**


PUT CASTER SUPPORT  
PANEL OVER WOOD  
BLOCKING, AND SCREW IN  
WITH WOOD SCREWS.



**8X**  
#8 X 1.42" LONG  
FLAT HEAD WOOD SCREW


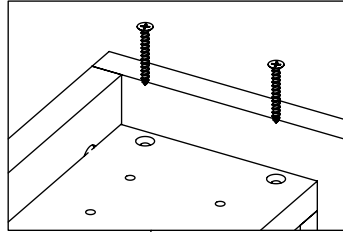


2X  
CASTER  
SUPPORT  
PANEL

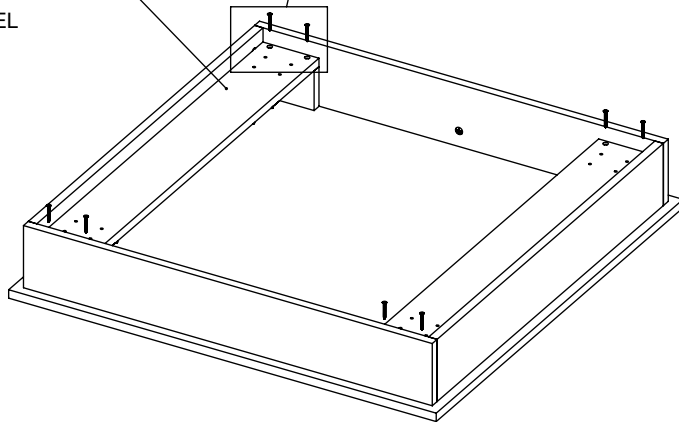

**3**

PUT CASTERS WITH  
BRAKES AND CASTERS  
WITHOUT BRAKES ON  
OPPOSITE CORNERS.

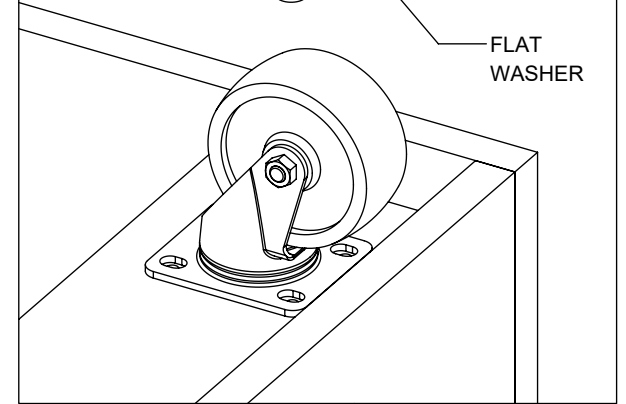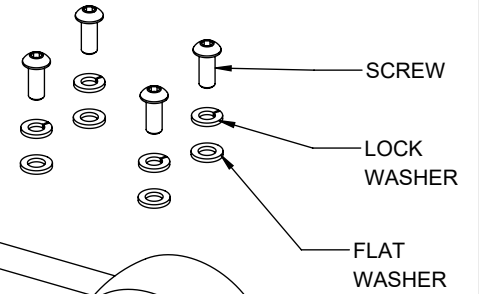


CASTER  
WITH BRAKE

CASTER  
NO BRAKE

CASTER  
NO BRAKE

CASTER  
WITH BRAKE


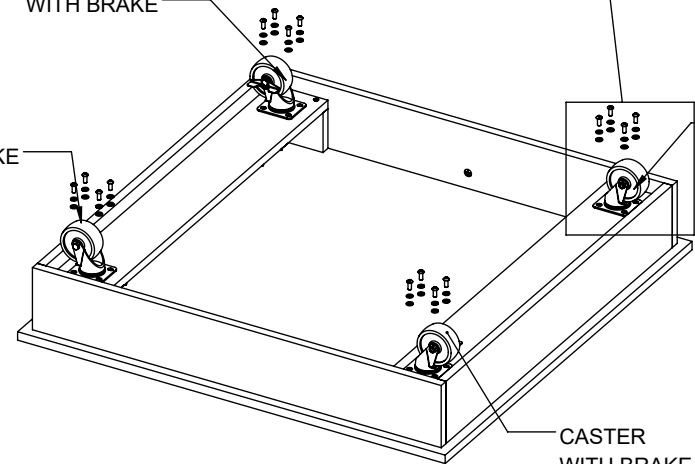


**4-WAY SLATWALL MERCHANDISER  
INSTRUCTIONS  
(CONTINUED FROM SHEET 2)**

**3**

- INSERT STEMS ON SLATWALL
- ASSEMBLE AS SHOWN.
- REPEAT FOR OTHER (2) SLATWALLS.



**4X**  
CAM LOCK AND STEM

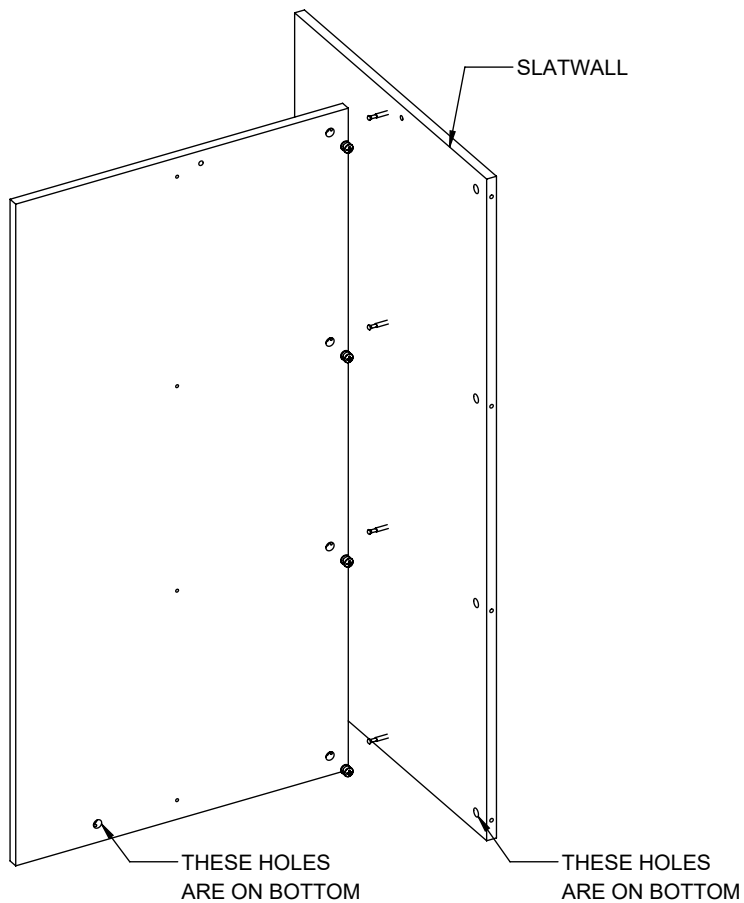

**4**



- INSERT STEMS ON SLATWALLS.
- ASSEMBLE SLATWALLS FROM STEP ①.
- PUSH SLATWALLS TOGETHER, THEN ASSEMBLE ONLY THE TOP (4) CAMS.

**4X** CAM LOCK  
**8X** STEM

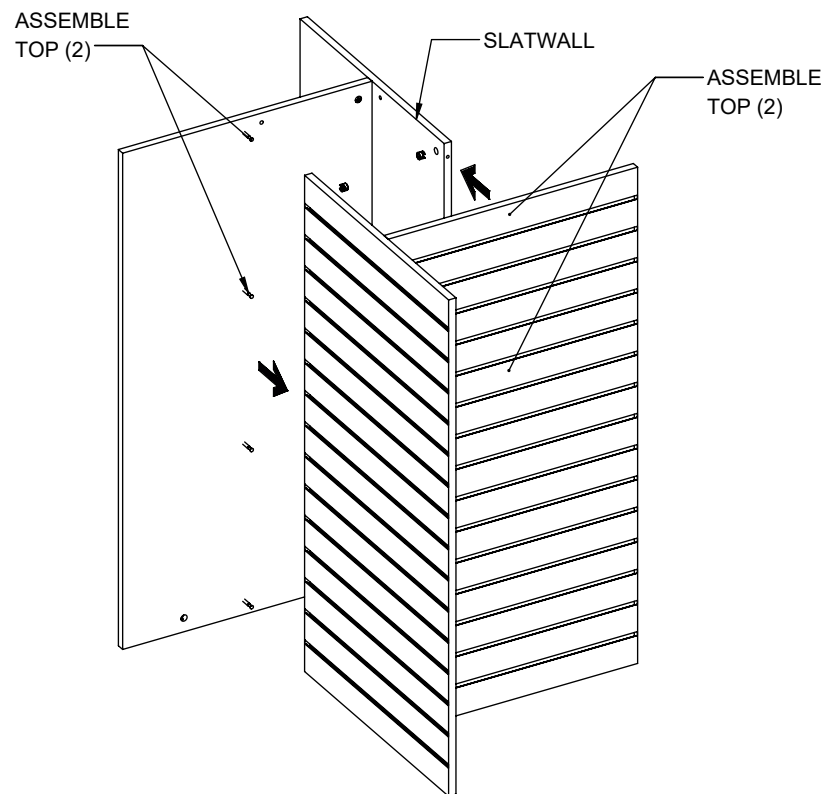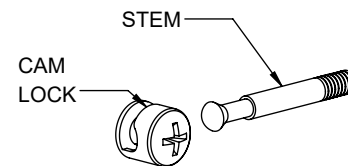



**5**

- FLIP OVER STEP ④.
- ASSEMBLE REMAINING (4) CAMS ON THE BOTTOM.

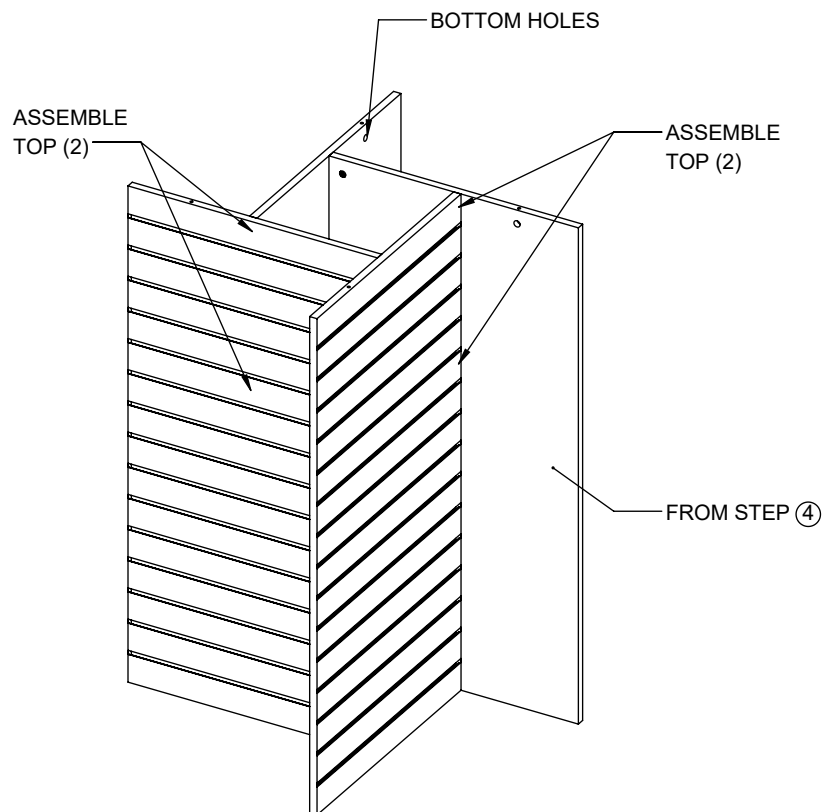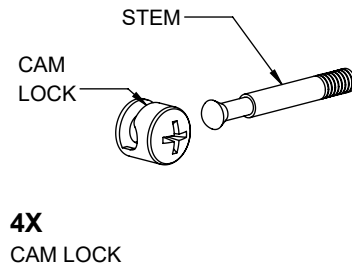

**6**

- FLIP OVER STEP ⑤.
- ASSEMBLE REMAINING (4) CAMS ON THE BOTTOM.

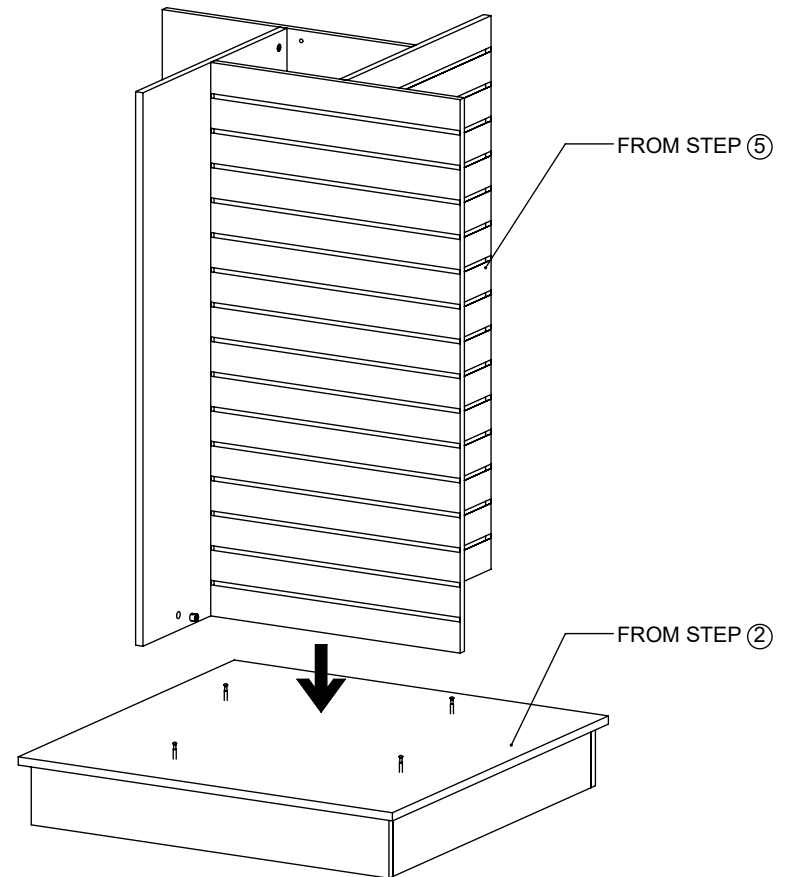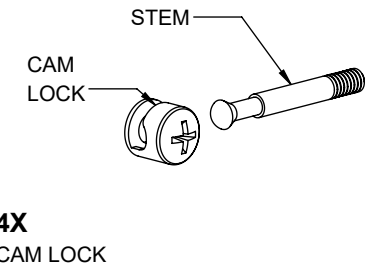

**7**

-ASSEMBLE TOP.

-APPLY STICKERS TO THE BOTTOM OF  
THE SLATWALL PANELS.

