


3/8"
SPRING LOCK WASHERS
4 REQUIRED PER THIS STEP

3/8"-16 X 2" LONG
SOCKET HEX HEAD SCREWS
4 REQUIRED PER THIS STEP


Assembly Instructions for
K40

SHEET 1 OF 3

REPEAT 2X

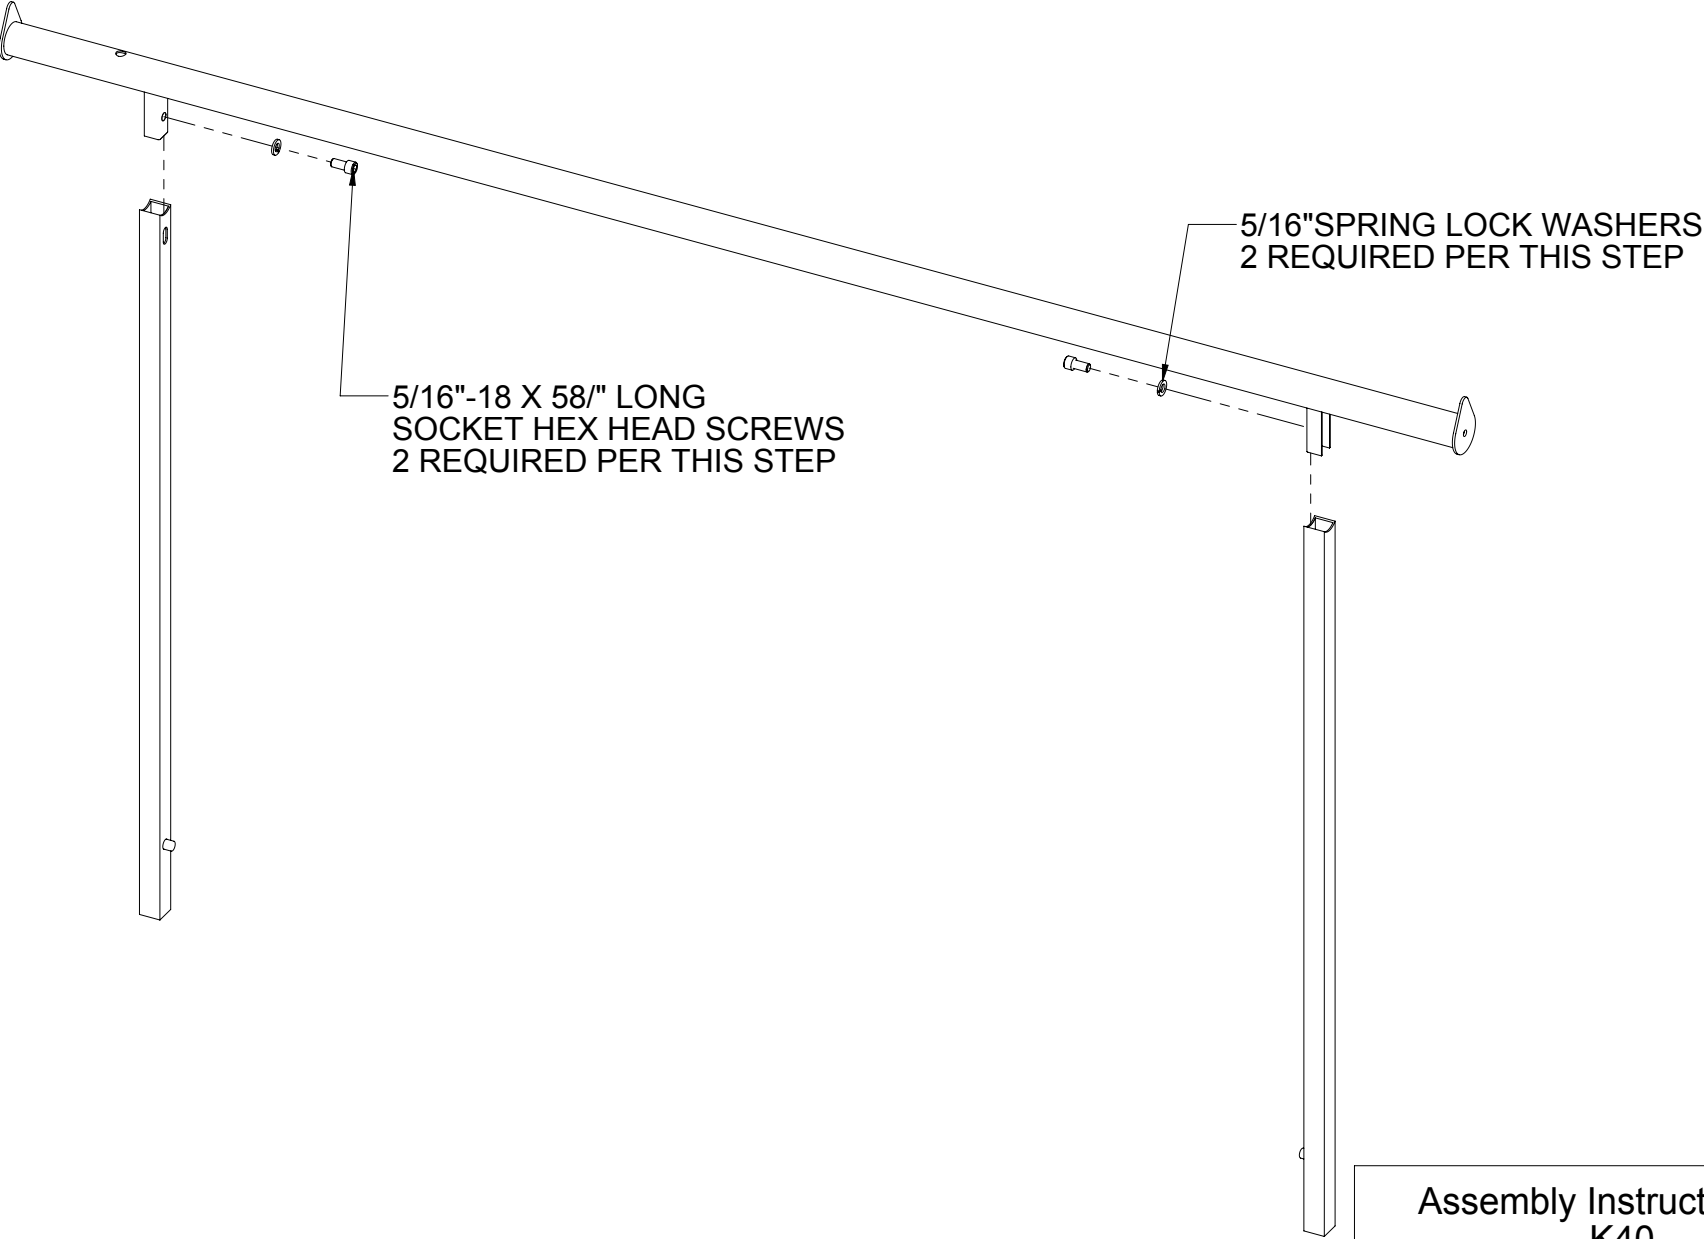

Assembly Instructions for
K40

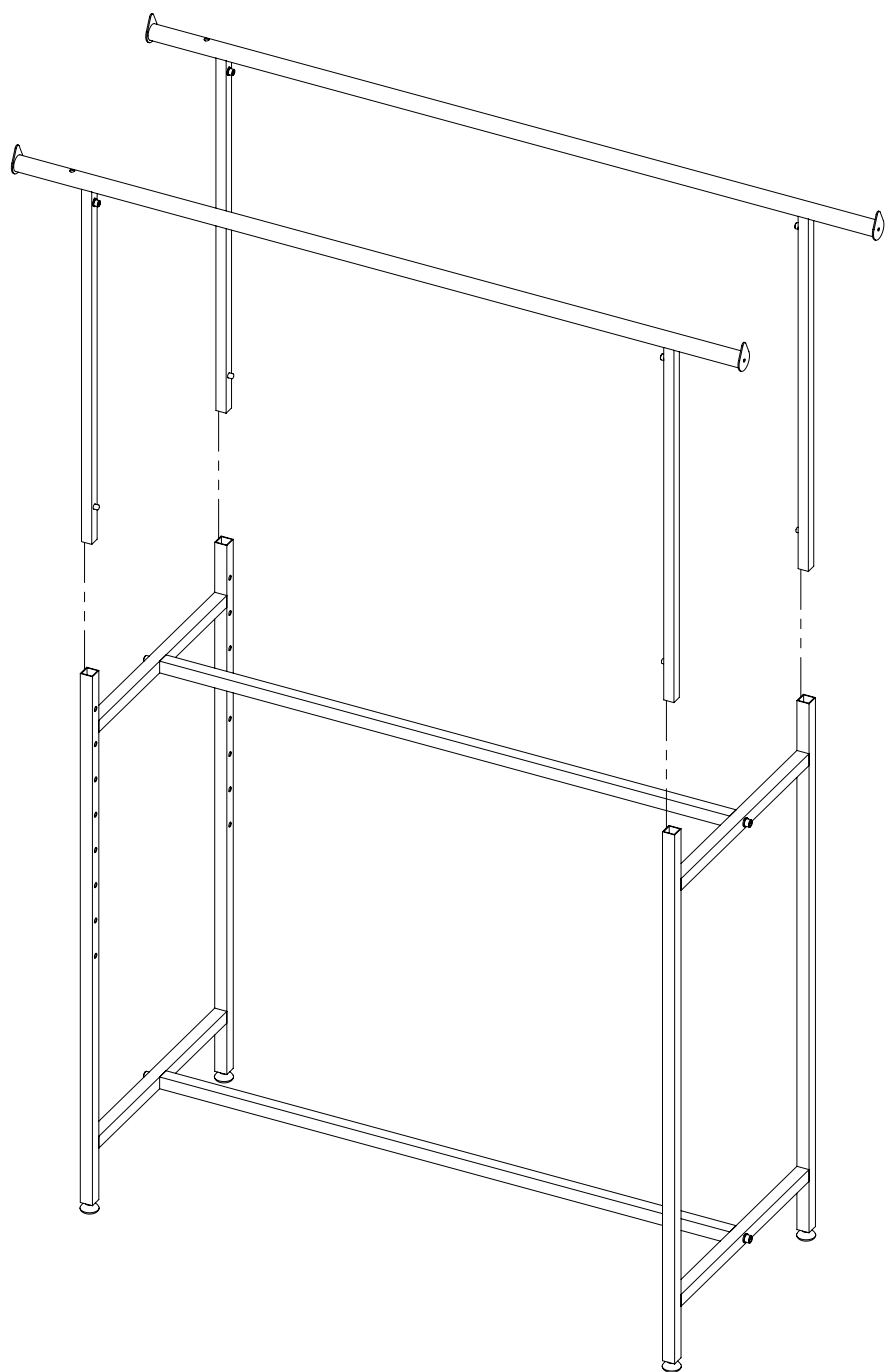

Assembly Instructions for K40