


**ASSEMBLY  
INSTRUCTIONS FOR:  
RZK8, RZK8RNG**

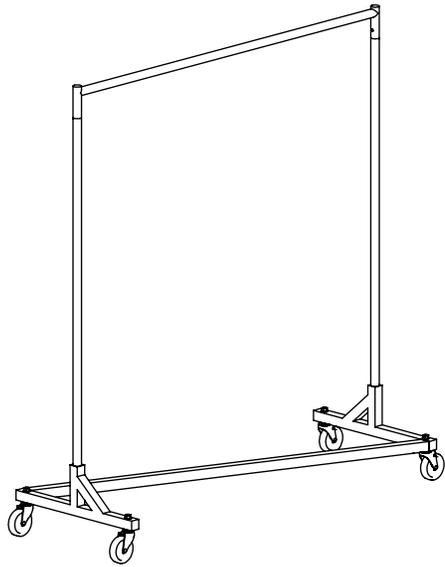

**TOOLS INCLUDED**




WRENCH



ALLEN KEY

**1**

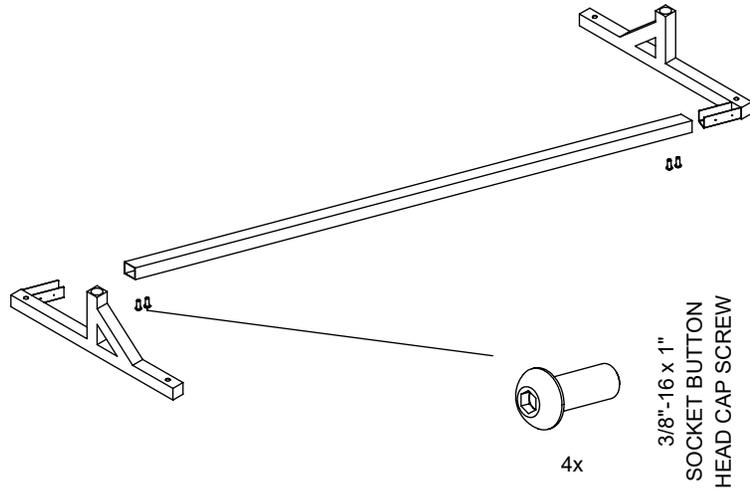




4x

3/8"-16 x 1"  
SOCKET BUTTON  
HEAD CAP SCREW

**2**


ASSEMBLE CASTERS TO BASE WITH WASHERS AND NUT.

USE WRENCH TO TIGHTEN THE NUT.

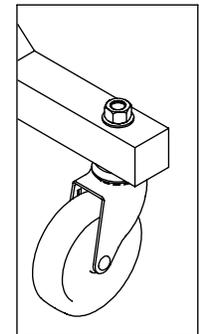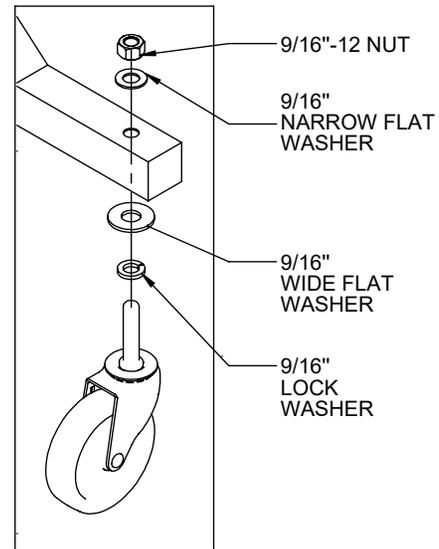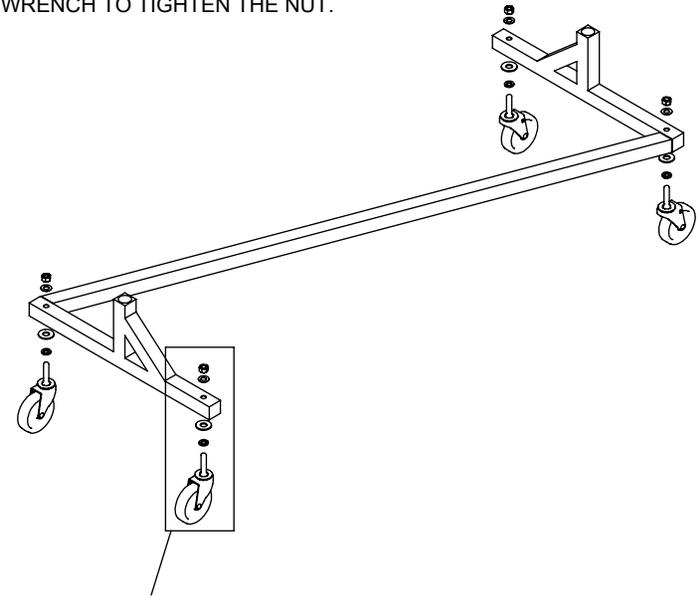

ASSEMBLED VIEW

**3** ALIGN PUSH BUTTONS TOWARDS INSIDE.

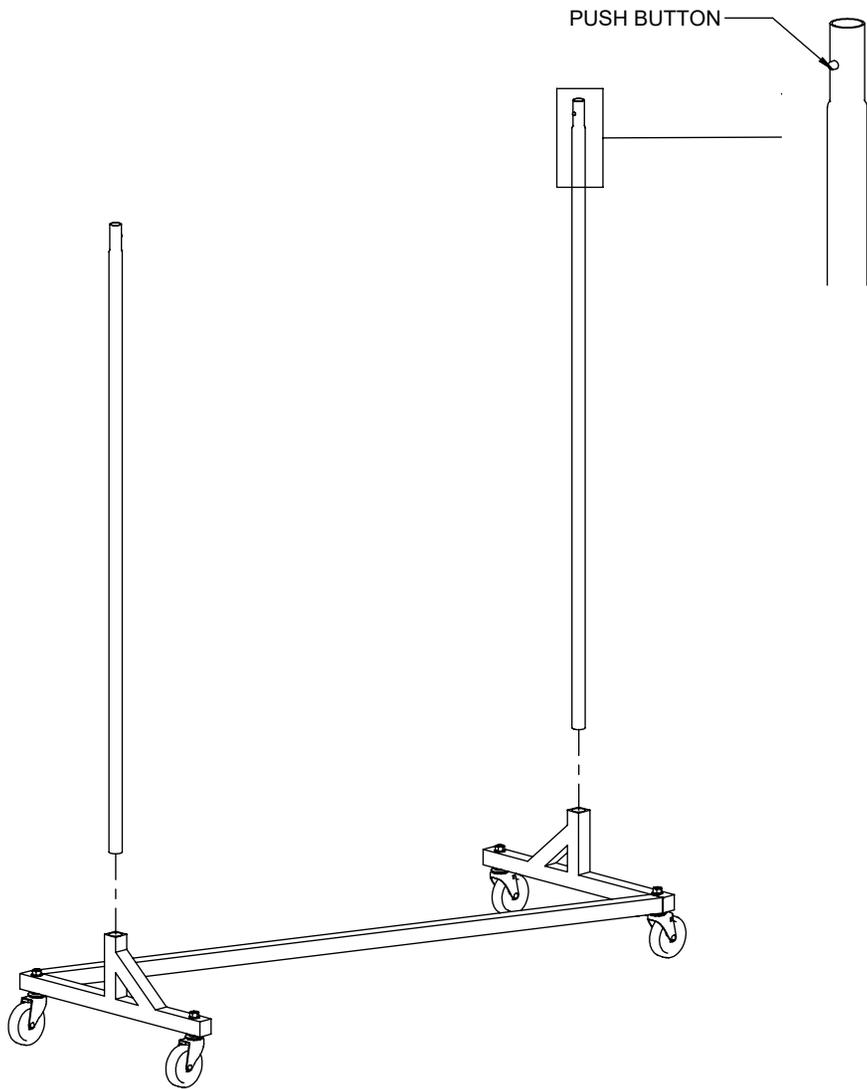

**4** INSERT HANG BAR INTO UPRIGHTS.

