



Assembly Instructions for
Items T504FRSC &
T504SC-H

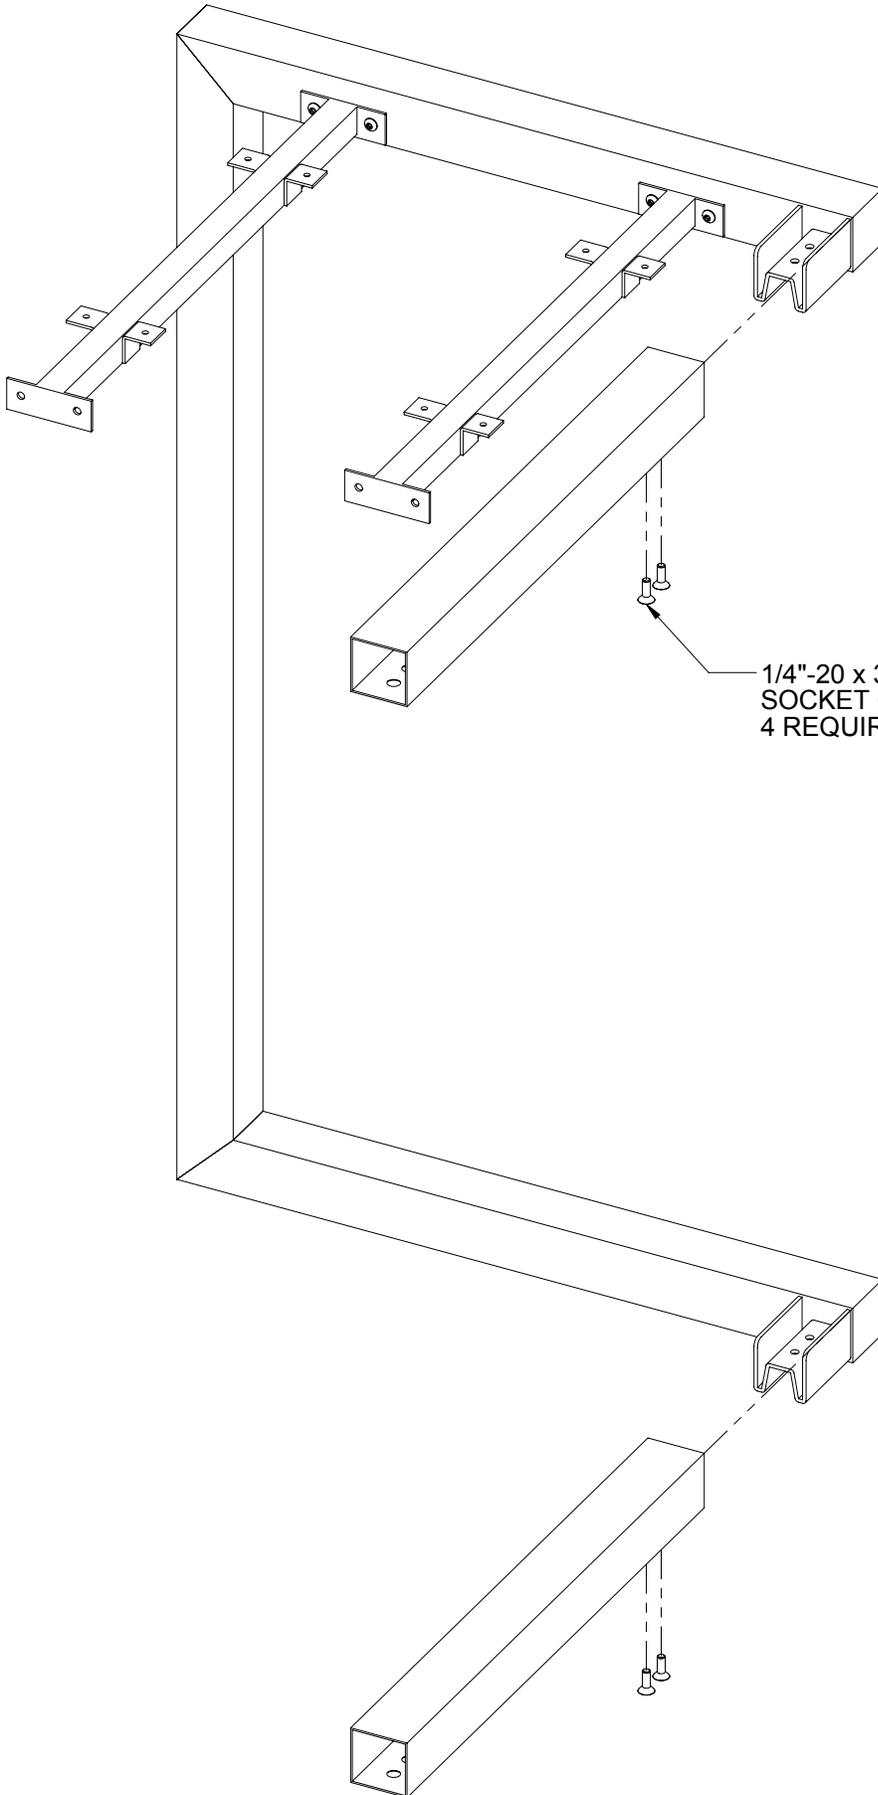

1/4"-20 x 3/4" LONG
SOCKET COUNTER SUNK SCREWS
4 REQUIRED PER THIS STEP


Assembly Instructions for
Items T504FRSC &
T504SC-H

1/4"-20 x 3/4" LONG
SOCKET BUTTON HEAD SCREWS
4 REQUIRED PER THIS STEP

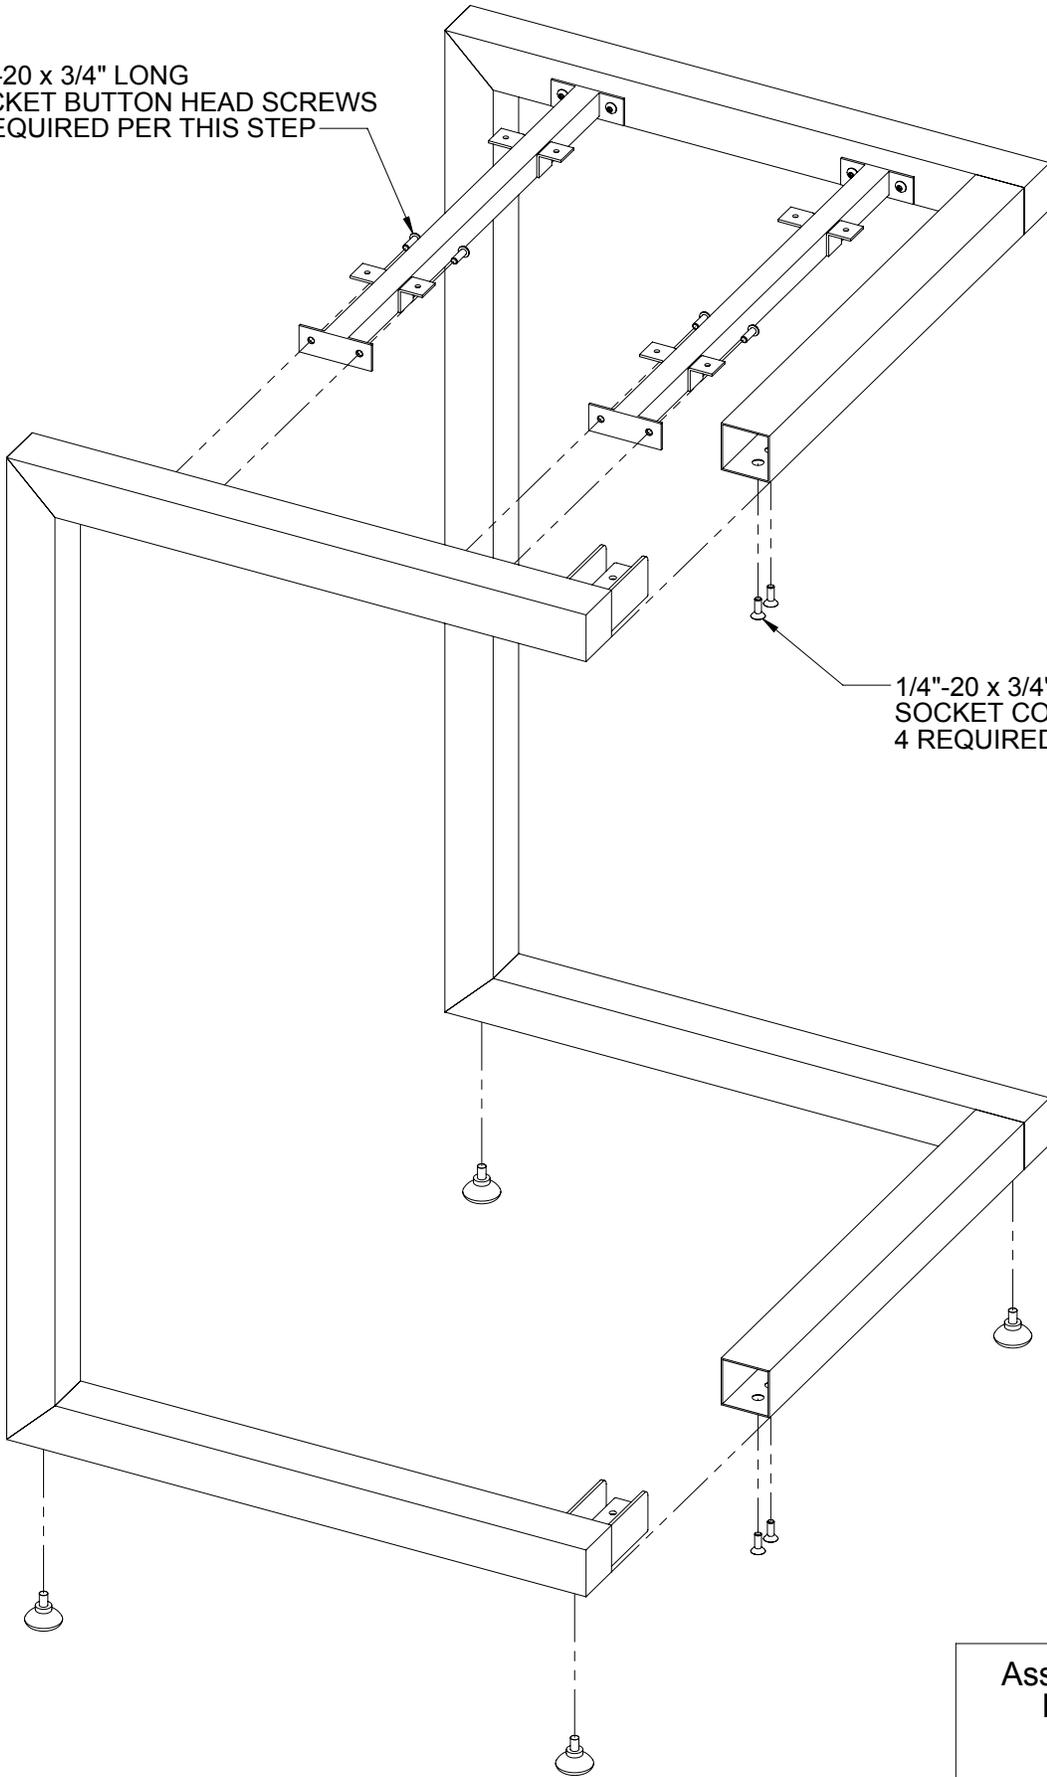

1/4"-20 x 3/4" LONG
SOCKET COUNTER SUNK SCREWS
4 REQUIRED PER THIS STEP

Assembly Instructions for
Items T504FRSC &
T504SC-H

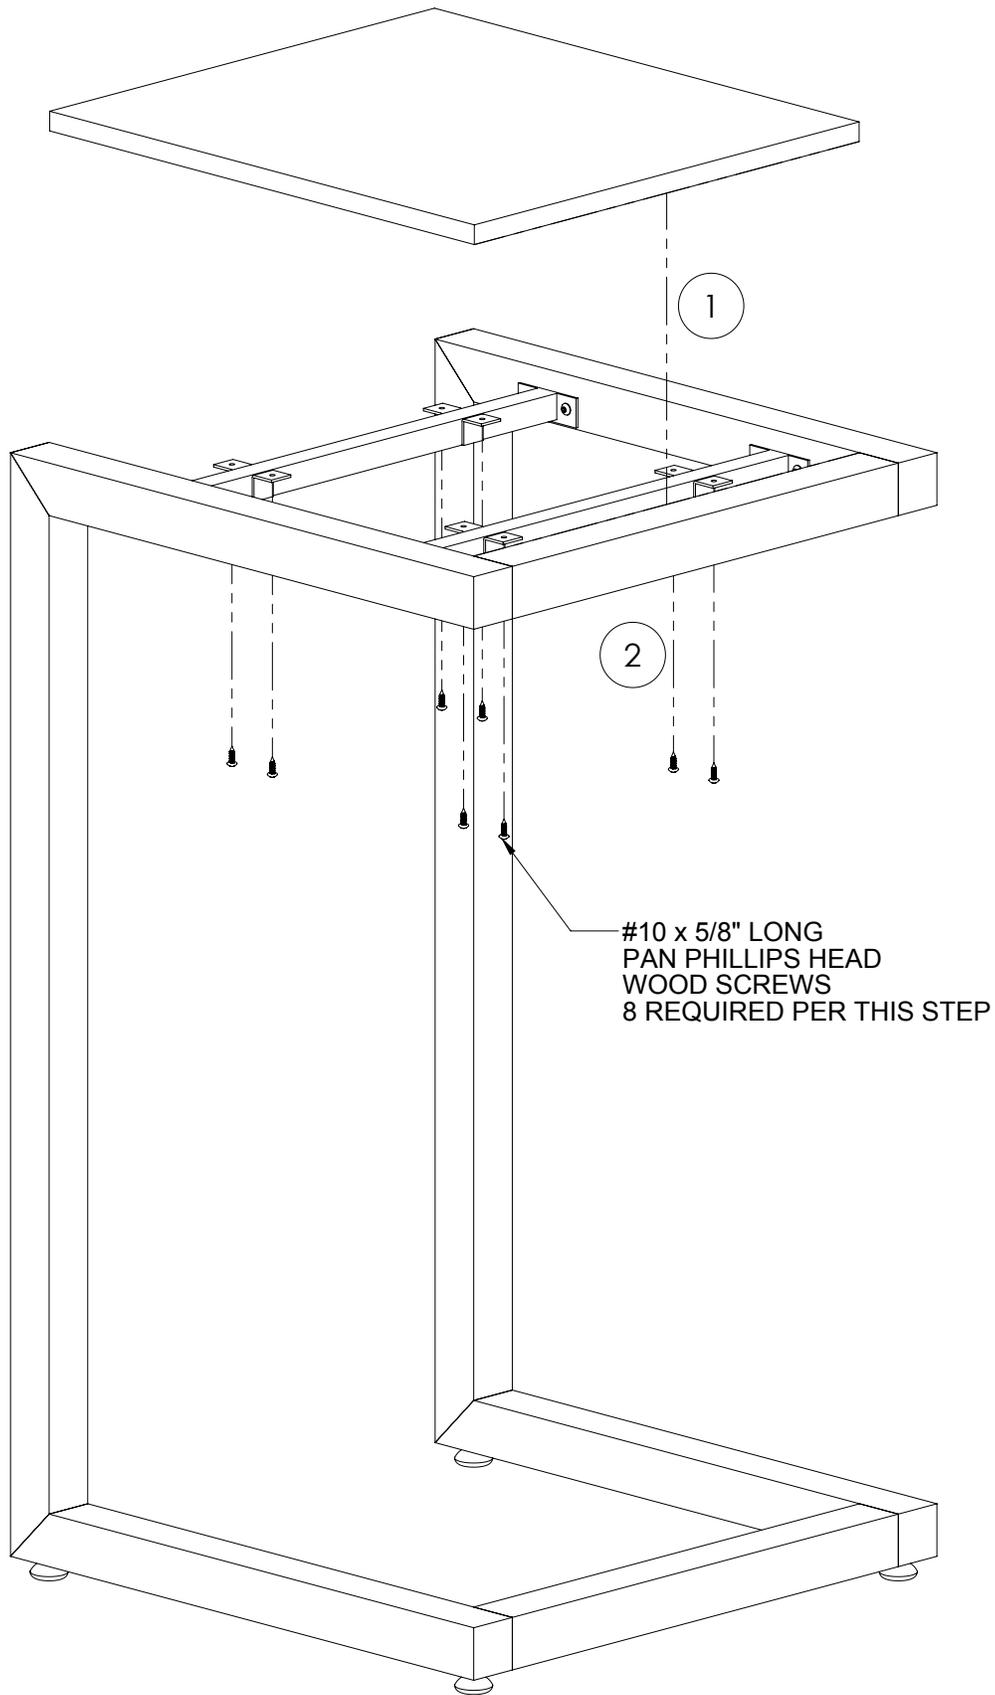

#10 x 5/8" LONG
PAN PHILLIPS HEAD
WOOD SCREWS
8 REQUIRED PER THIS STEP

Assembly Instructions for
Items T504FRSC &
T504SC-H